
DETROIT RADIANT PRODUCTS

Pressure Switch Replacement Instructions

Part #: TP-264F

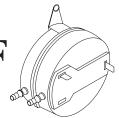

Contacts: Normally Open

Mfgr. No.: IS2 F5176

<u>Kit Contents</u>: TP-264F -20" Vinyl Tubing (Cut to size)


-2 insect resistent brass fittings

Replaces: TP-1061A

-Mfgr No: PPS-3226

Burner Switch Replacement

Dual Switch Operation2 Brass Barbs Required.

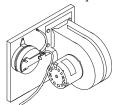


Instructions:

- 1) Disconnect the electrical supply.
- 2) Remove faulty switch.
- 3) Connect the negative (-) marked barb to the vinyl tube connected to the atmospheric brass barb (ducted out of the burner box).
- 4) Connect the positive (+) marked barb to the vinyl tube according to the diagram above.
- 5) Reassemble the switches on the center divide panel. Using only one mounting hole on the new IS2 series switch.
- 6) Ensure that the vinyl tube(s) have smooth radius bends and no obstructions or kinks.
- 7) Connect spade terminals to Com & NO.
- 8) Replace control box cover.
- 9) Reconnect electrical power supply.

Series Affected: LS, LD

Differential Switch Replacement

Single Switch Operation
No Brass Barbs Required.

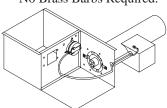

Instructions:

- 1) Disconnect the electrical supply.
- 2) Remove faulty switch.
- 3) Connect the 20" vinyl sensing tube to the IS2 pressure switch barb fitting marked (-).
- 4) Reassemble pressure switch on center divide panel. Using only one mounting hole on the new IS2 series switch.
- 5) Ensure that the vinal tube has smooth radius bends and no obstructions or kinks.
- 6) Reconnect electrical to Com. & N.O. spade terminals.
- 7) Replace control box cover.
- 8) Reconnect electrical power supply.

Series Affected: HL2, DX2, XTS, DET, DES, RH, RVA2, AG2, AG1, SV,



