INSTALLER/CONFIGURATION MENU

	Check Box For Your Model Number			To enter the menu: Press the System button until OFF is displayed, then press			
				\bigcirc and \bigcirc simultaneously. This displays menu item #1 in the table below.			
	1F83-277	1F85-275	1F85-277	CONFIGURATION MENU			
Menu					Displayed	Press 📀 or ⊙	
Reference				Press	(Factory	to select from	
Number	Step	Step	Step	Button	Default)	listed options	Comments
1	1	1	1	SYSTEM	MS 2	HP1, HP2, SS1	Selects Multi-Stage, Heat Pump 1
							(1 Compressor), Heat Pump 2
							(2 Compressor or 2 Speed Compressor),
							or Single Stage
2	N/A	N/A	2	SYSTEM	(7)	5d, 0d	Selects Number of Programs per Week
3	N/A	2	3	SYSTEM	PRG 4	PRG 2, PRG 0	Selects Programmable Periods
4	N/A	3	4	SYSTEM	4:00 HOLD	0:15 to 8:00	Selects Temporary Program Override Time
						(increments of	NOTE: Maximum setting is 4:00 hours for
						15 minutes)	1F85-277
5	N/A	4	5	SYSTEM	EMR (on)	OFF	Selects Energy Management Recovery
							OFF or ON
6	2	5	6	SYSTEM	FA 🔆 🙆	SL	Selects Fast or Slow Cycle Selection
7	3	6	7	SYSTEM	CL (OFF)	CL on	Selects Compressor Lockout CL OFF or ON
8	4	7	8	SYSTEM	CdL (on)	CdL OFF	Selects Backlight Display
9	5	8	9	SYSTEM	FA (on) 🛠 🤷	FA OFF	Selects Fast Second Stage ON or OFF
10	6	9	10	SYSTEM	0 FLTR	50-1950	Selects filter replacement run time
11	7	10	11	SYSTEM	0 (Room	4 LO to 4 HI	Selects Temperature Display Adjustment
					Temp)	Selects	4 LO to 4 HI
12	8	11	12	SYSTEM	F	С	For Centigrade selection
13	9	12	13	SYSTEM	AU (on)	AU OFF	Selects Auto Mode ON or OFF
14	10	13	14	SYSTEM	LR (90) 🙆	LR 62 to LR 89	Selects Limited HEAT range
15	11	14	15	SYSTEM	LR (45) 🔆	LR 46 to LR 82	Selects Limited COOL range
16	12	15	16	SYSTEM	(OFF) 🔒	on	Selects Keypad Lockout
17	13	16	17		000 If L/O	001 to 999	Selects Keypad Lockout combination number.
							Press System to set code
18	14	17	18	* RUN			Returns to the OFF position
				** SYSTEM			

* Programmable Models

** Non-Programmable Models

