


I-ICE MACHINES  
 SELF-CONTAINED 1 PHASE  
 CAUTION: DISCONNECT POWER BEFORE WORKING  
 ON ELECTRICAL CIRCUITRY.

SEE SERIAL PLATE FOR VOLTAGE

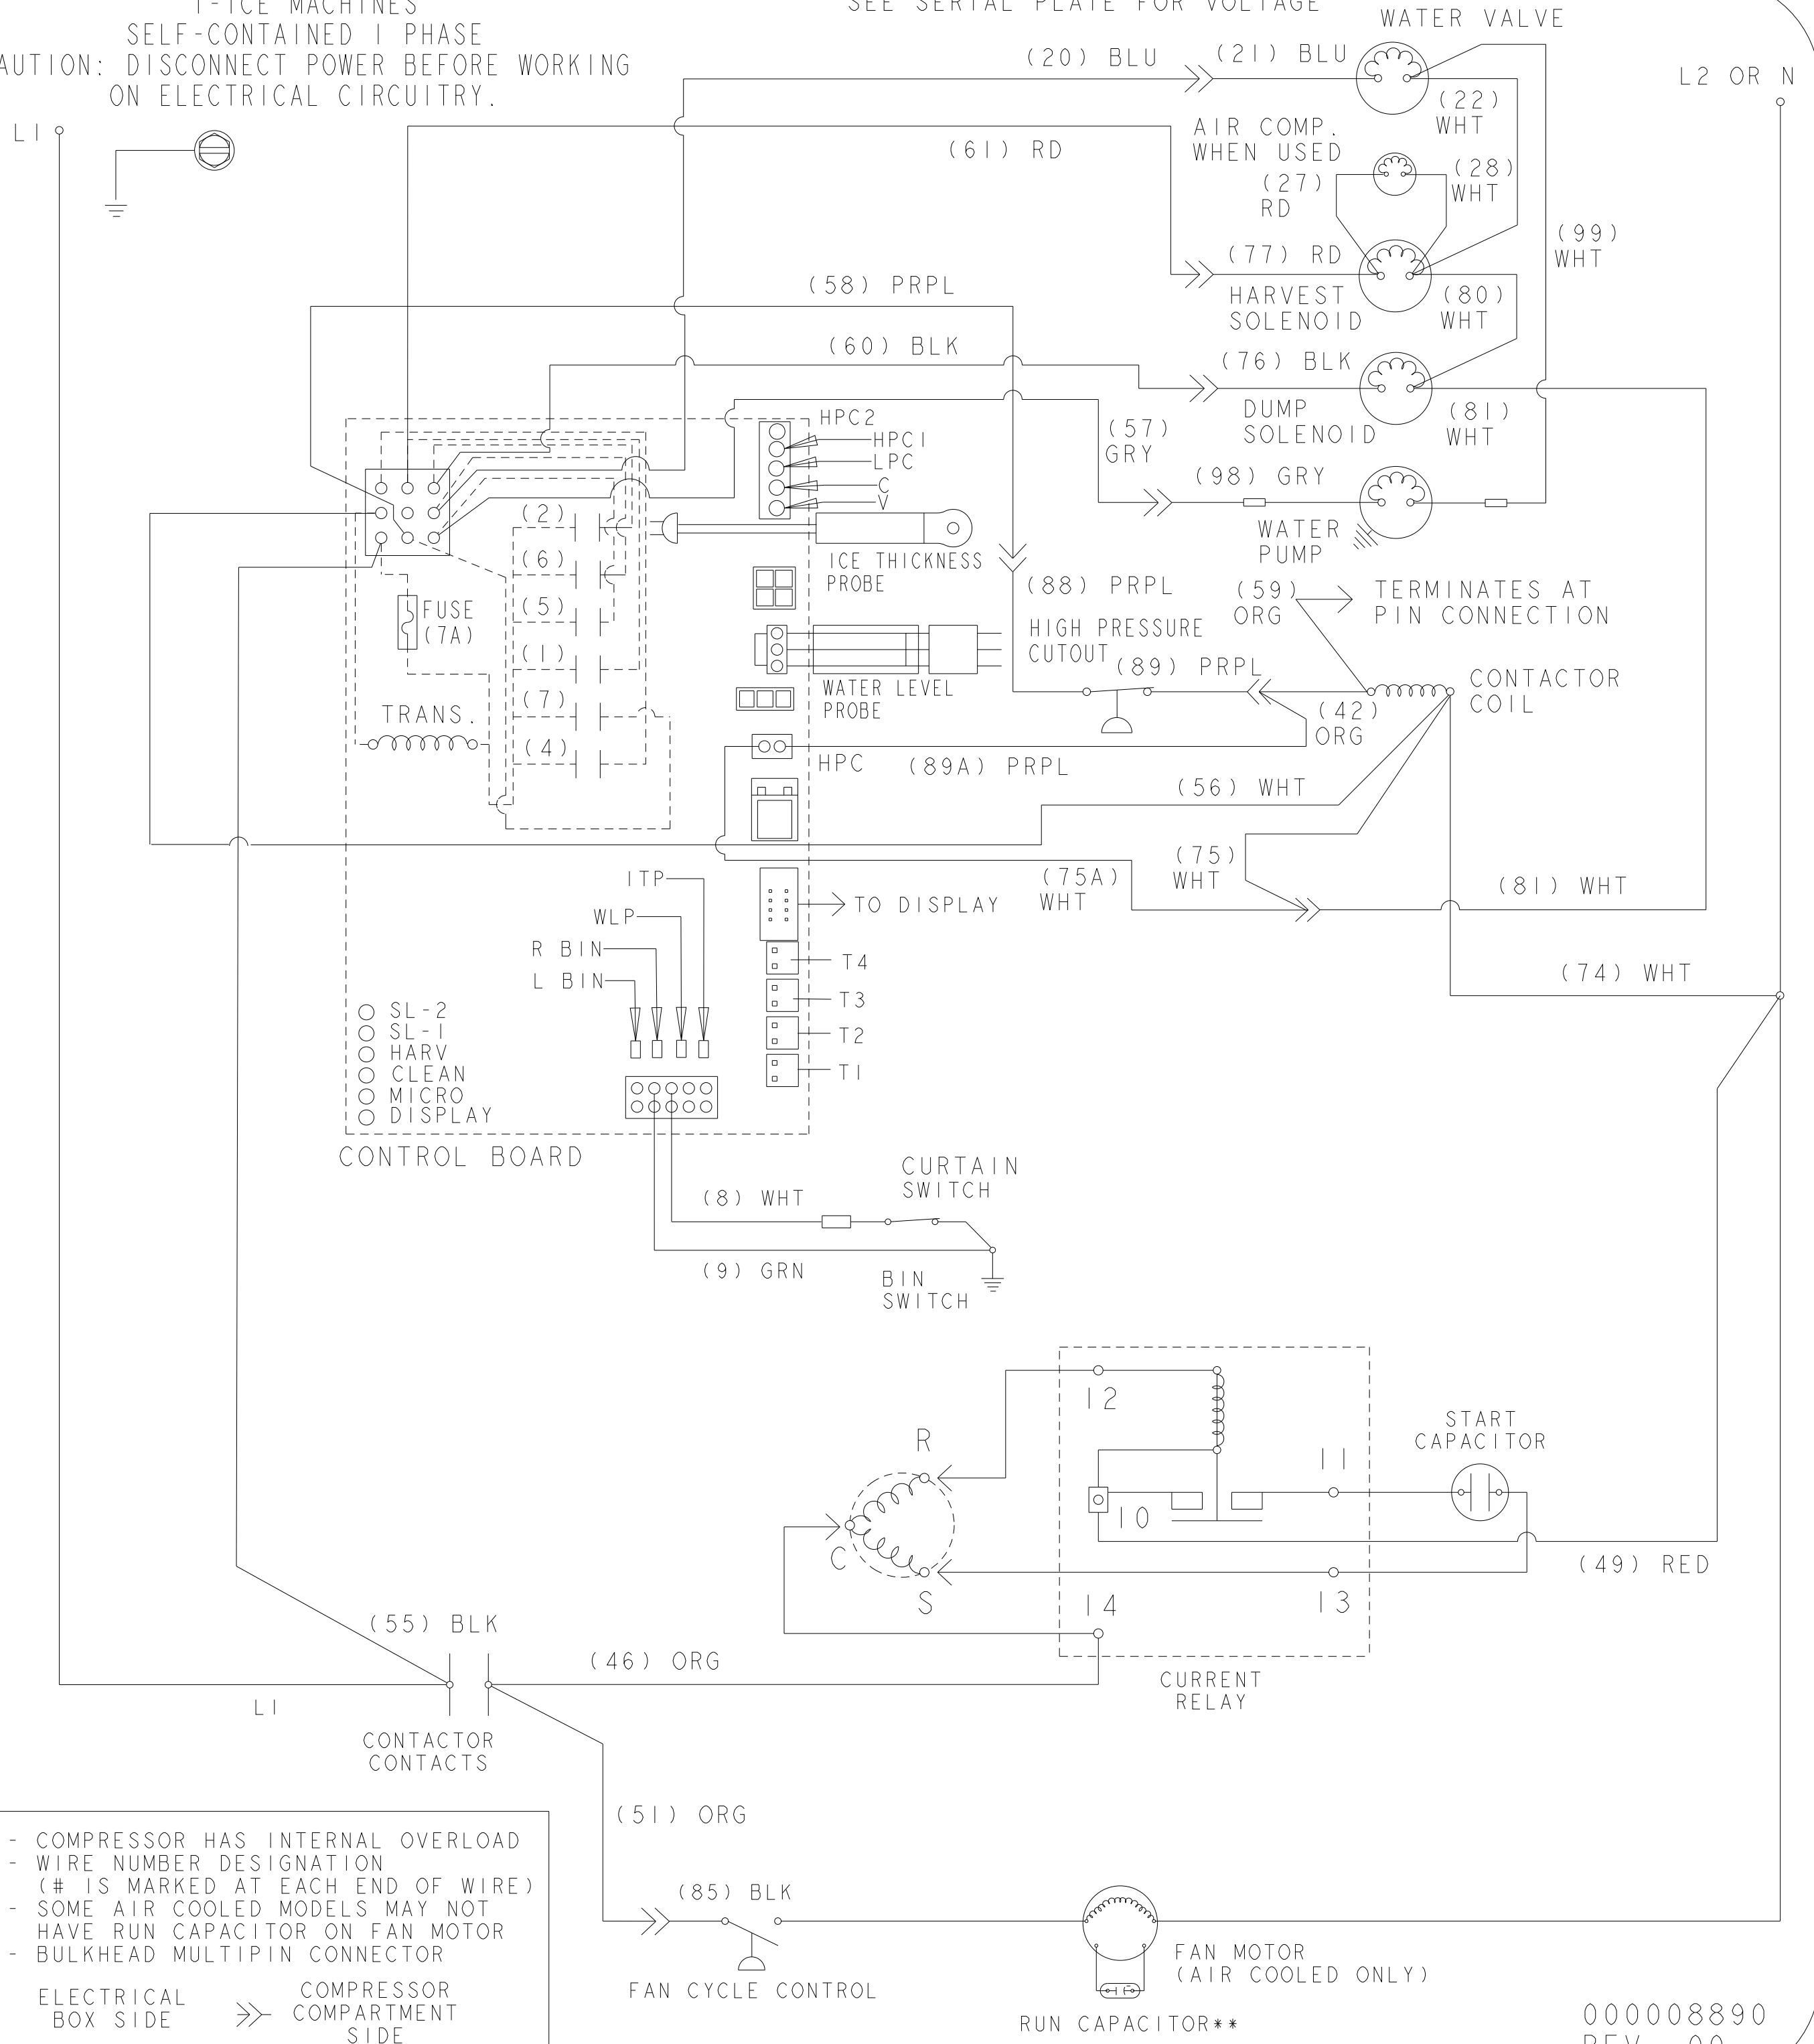

\* - COMPRESSOR HAS INTERNAL OVERLOAD  
 ( ) - WIRE NUMBER DESIGNATION  
 (# IS MARKED AT EACH END OF WIRE)  
 \*\* - SOME AIR COOLED MODELS MAY NOT  
 HAVE RUN CAPACITOR ON FAN MOTOR  
 >>> - BULKHEAD MULTIPIN CONNECTOR

ELECTRICAL BOX SIDE >>> COMPRESSOR COMPARTMENT SIDE

000008890  
 REV. 00